


SoftBank 001DL

クイックスタートガイド


2010 年 10 月　　P/N 1F5NP　　Rev. A00

背面カバーを取り外す

❶

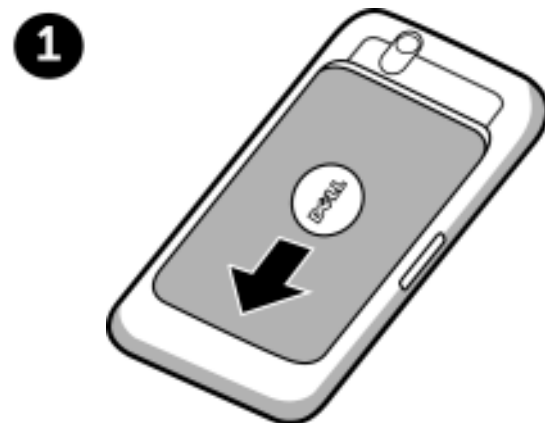


❷

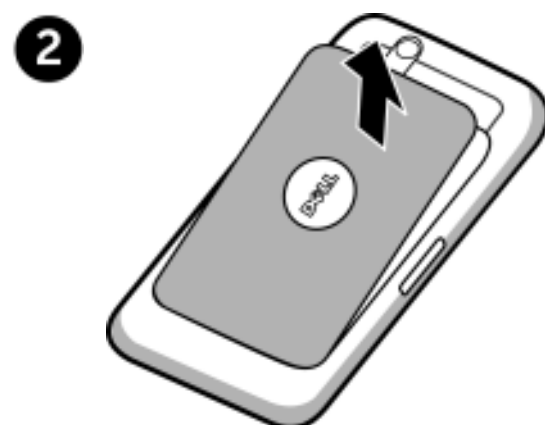


SIM カードを挿入する

❶

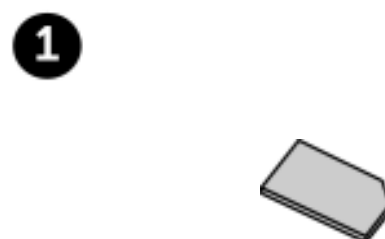


❷

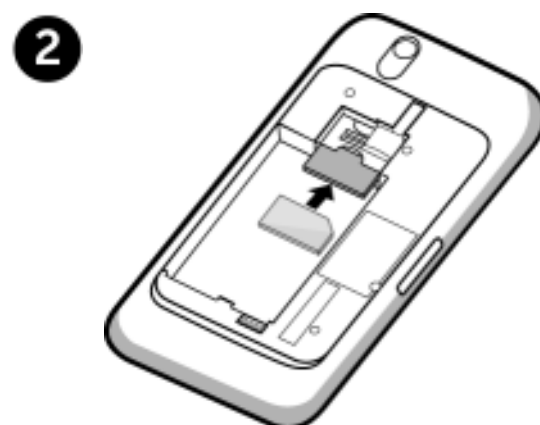


電池パックを取り付ける

❶

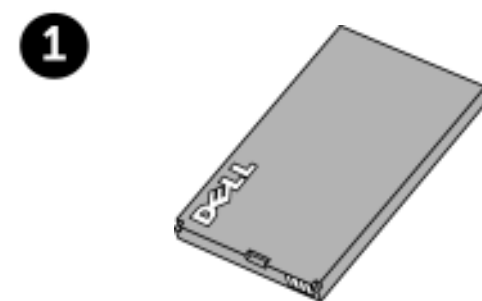

❷

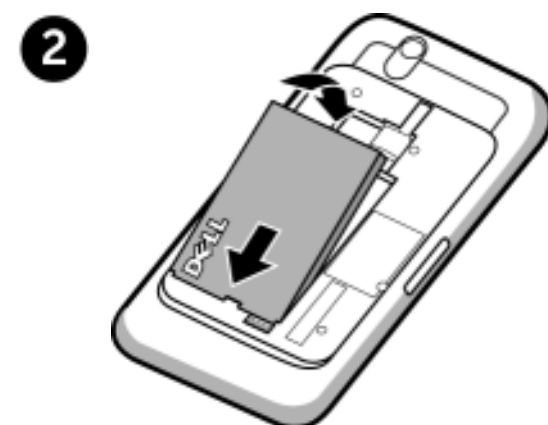


microSD カードを挿入する

❶



❷

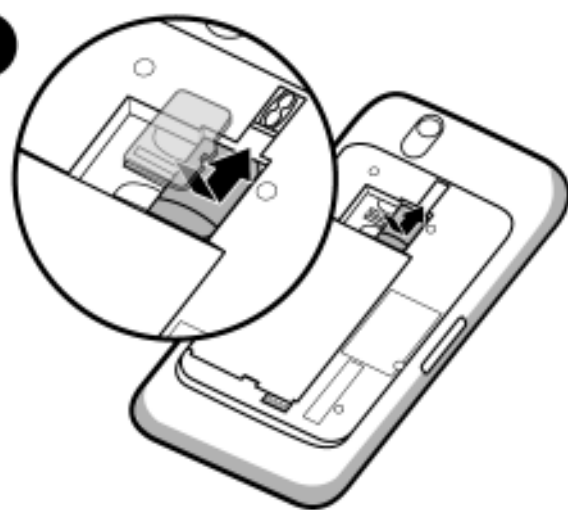

背面カバーを取り付ける

❶




❷




背面カバーは隙間がないよう
最後まで押し込んでください。


電池パックを充電する

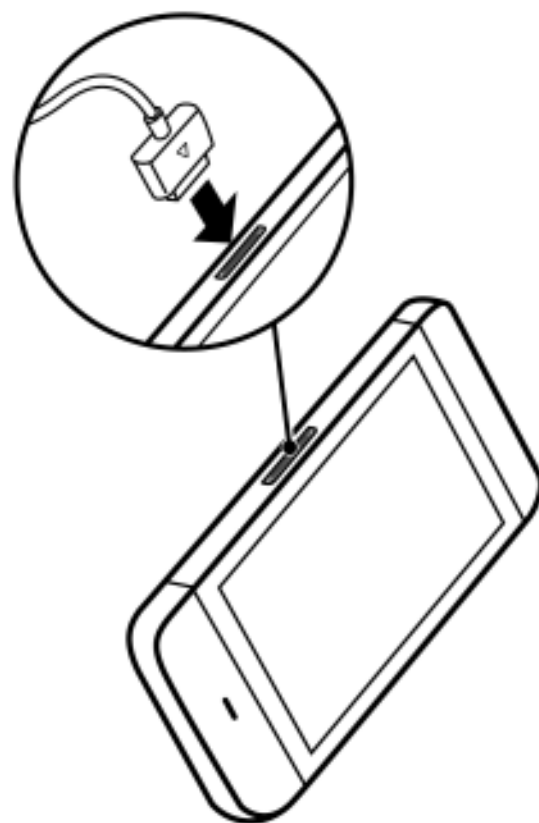

各部の名称

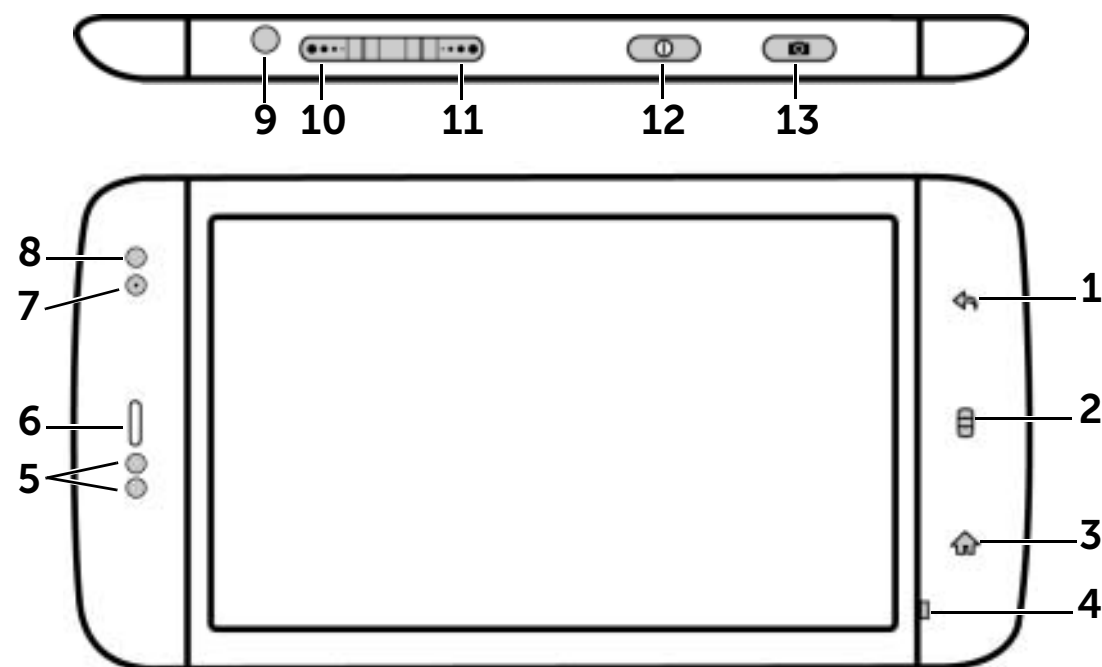

1. 戻るボタン
2. メニューボタン
3. ホームボタン
4. マイク
5. 近接センサー
6. レシーバー
7. 前面カメラレンズ
8. 環境照明センサー
9. イヤホン端子
10. ボリュームダウンボタン
11. ボリュームアップボタン
12. 電源およびスリープ / ウェイクボタン
13. カメラボタン

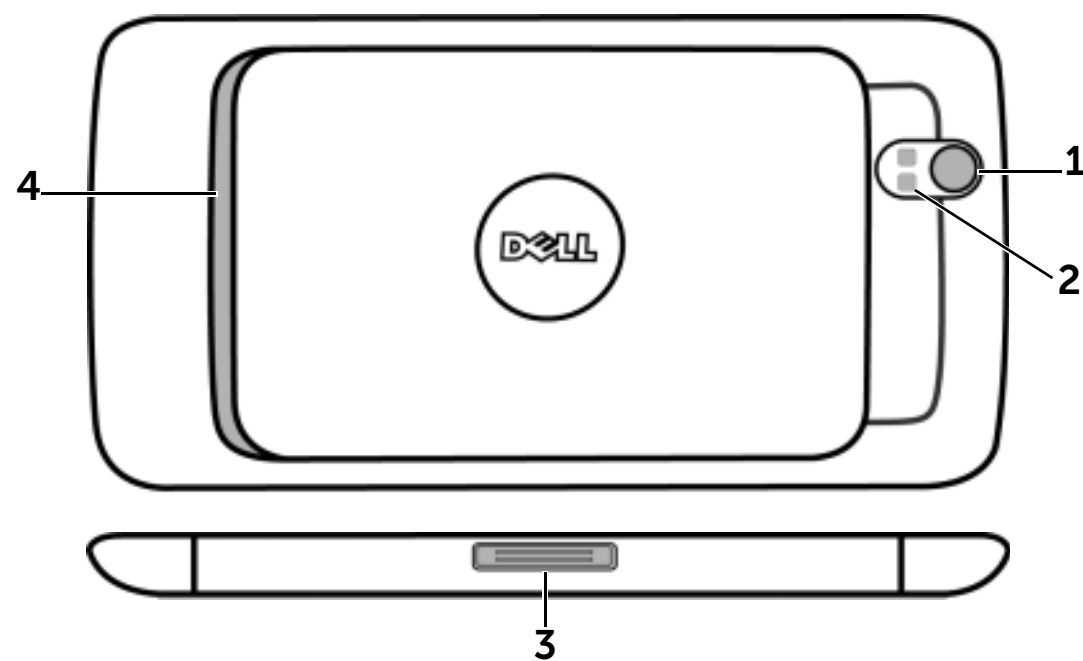


1. カメラレンズ
2. カメラフラッシュ
3. 外部接続端子
4. スピーカ

電源を入れる

電源ボタンを押し続ける



メモ : デバイスがオンの時に背面カバーを外すと、デバイスは自動的にオフになります。

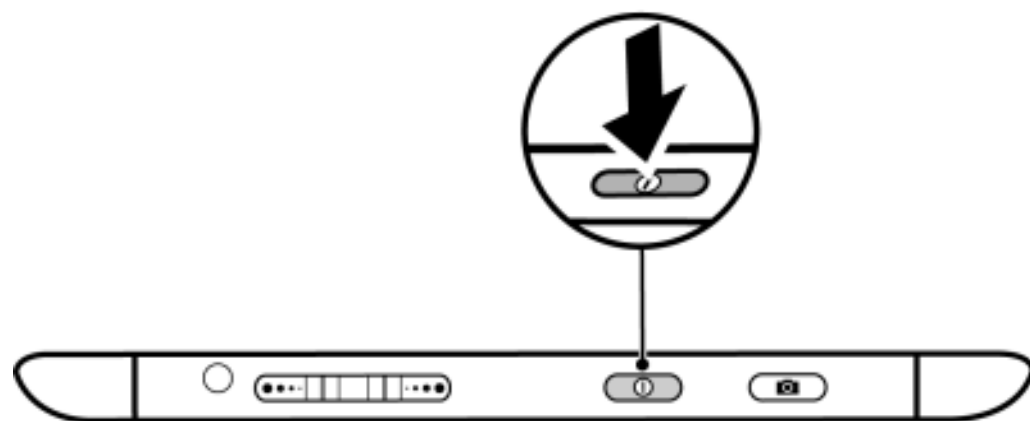

Wi-Fi をオンにしてネットワークに接続

1 ホームボタン → メニューボタン → **設定**→ **無線とネットワーク**→ **Wi-Fi** とタッチして、Wi-Fi チェックボックスを選択します。デバイスが、利用できるワイヤレスネットワークをスキャンします。

2 **Wi-Fi 設定**をタッチします。検出された Wi-Fi ネットワークの名前およびセキュリティ設定が **Wi-Fi ネットワーク**リストに表示されます。

3 **Wi-Fi ネットワーク**リストをフリックし、接続したいネットワークの名前をタッチします。


4 パスワードを入力し（必要な場合）、**接続**をタッチして Wi-Fi ネットワークに接続します。



メモ : お使いのデバイスがワイヤレスネットワークに接続されると、シグナルの強度を示す Wi-Fi アイコン がステータスバーに表示されます。


マイクロフォン付きイヤホンの接続

マイクロフォン付きイヤホンをイヤホン端子に接続する

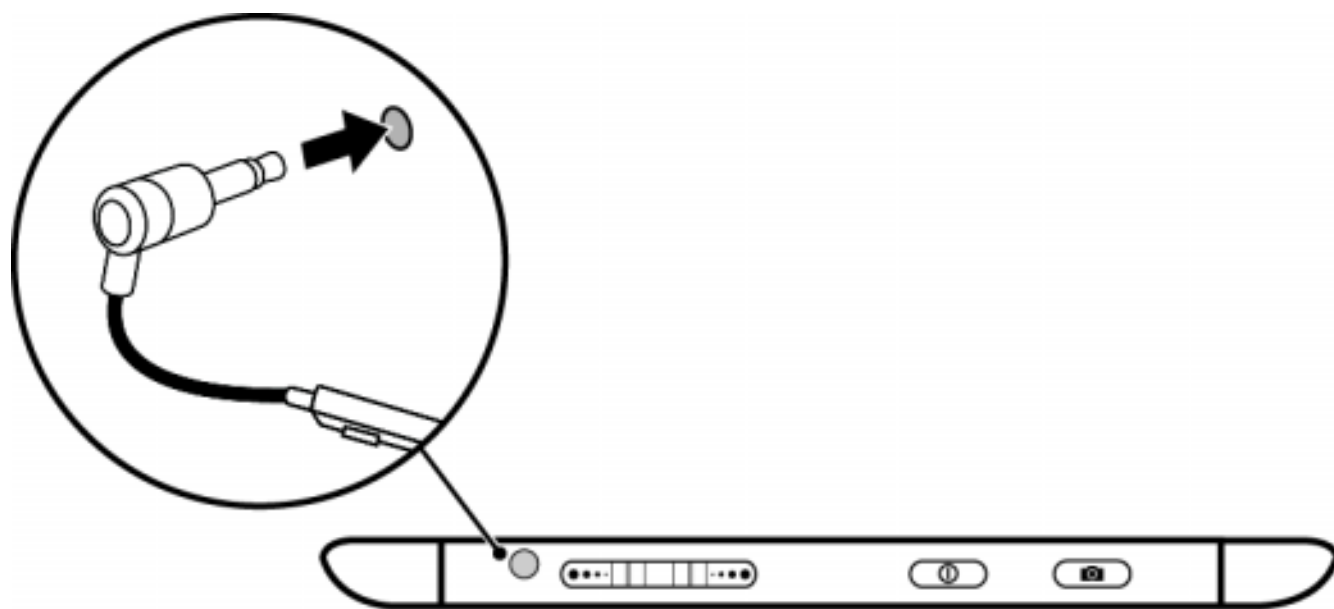

デバイスの microSD カードに音楽、写真、およびビデオファイルをコピーする

1 デバイスとコンピュータに USB ケーブルを接続します。コンピュータが自動的にドライバをインストールするのを待ちます。
2 インストールが完了したら、新しい「リムーバブルディスク」がコンピュータに表示されます。これで、コンピュータから microSD カードの内容を見ることができるようになります。
3 コンピュータから音楽、写真、またはビデオファイルを選択し、それらのファイルをリムーバブルディスクにある音楽、写真、ビデオフォルダにそれぞれコピーします。
4 コピーが完了したら、USB ケーブルを取り外します。

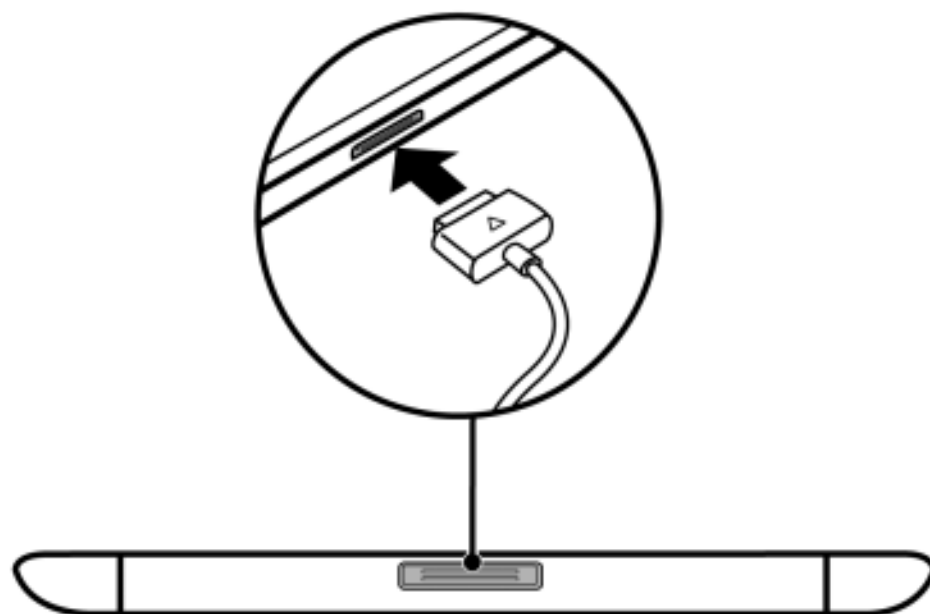

連絡先のロード

SIM から連絡先をコピーする

1 ホームボタン → ランチャーボタン → **連絡先** とタッチ、または電話ボタン → **連絡先** とタッチします。

2 メニューボタン → **インポート / エクスポート**→ **SIM カードからインポート**とタッチします。

3 連絡先をタッチしてデバイスに追加、またはメニューボタン → **すべてをインポート**とタッチしてすべての連絡先をデバイスにコピーします。

Gmail から連絡先を追加する

1 ホームボタン → メニューボタン → **設定**→ **アカウント & 同期化**とタッチして、**アカウント & 同期化設定**メニューを開きます。

2 **アカウントの追加**→ **Google** とタッチし、Google アカウントにサインインします。

3 戻るボタン をタッチして**アカウント & 同期化設定**メニューに戻り、**自動同期化**をタッチします。

4 Gmail アカウントをタッチし、**連絡先の同期化**をタッチします。

5 ホームボタン → ランチャーボタン → **連絡先** とタッチ、または電話ボタン → **連絡先** とタッチします。

6 メニューボタン → **表示オプション**とタッチします。

7 Gmail アカウントをタッチし、連絡先グループリストをスクロールダウンして、**その他すべての連絡先**をタッチして選択します。

詳細情報

詳細に関しては、**support.jp.dell.com/manuals** で取扱説明書を参照してください。または、QuickOffice を起動し、**メモリカード**を選択することで、お使いのデバイスで取扱説明書を表示することもできます。

ご利用いただけるサービスおよび詳細については、ソフトバンクモバイルホームページ (**http://www.softbank.jp/**) をご確認ください。

取扱説明書の最新版は、ソフトバンクモバイルのホームページよりダウンロードできます。

http://www.softbank.jp/mb/r/support/001dl/




SoftBank 001DL

Quick Start Guide


October 2010   P/N 1F5NP   Rev. A00

Remove the back cover

1

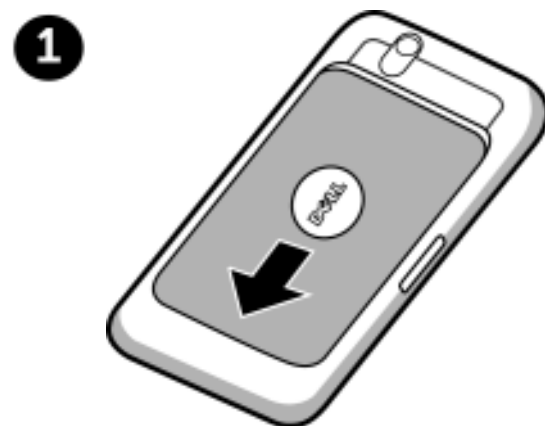


2

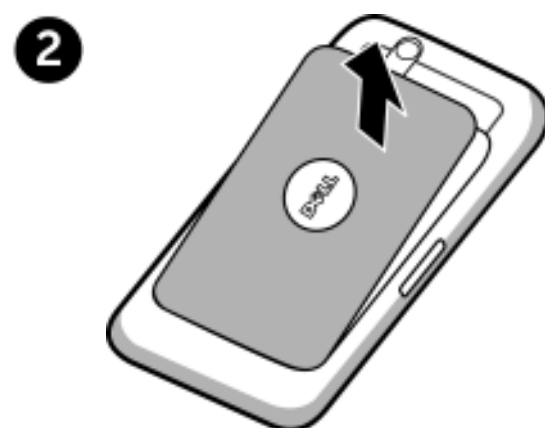


Insert the SIM card

1

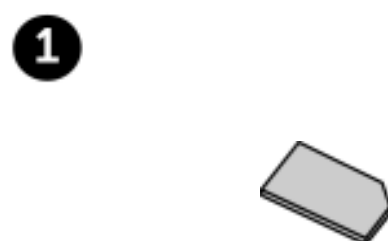

2

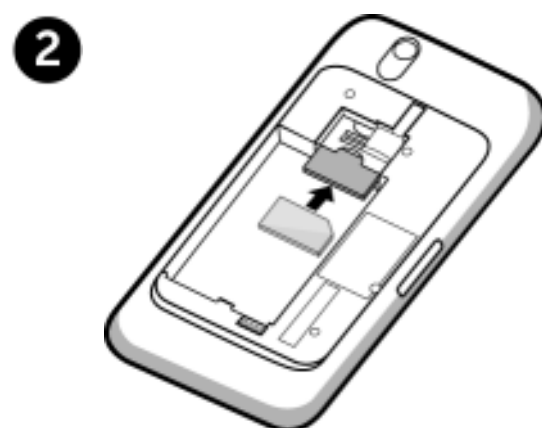

Insert the battery


1




2




Insert the microSD card

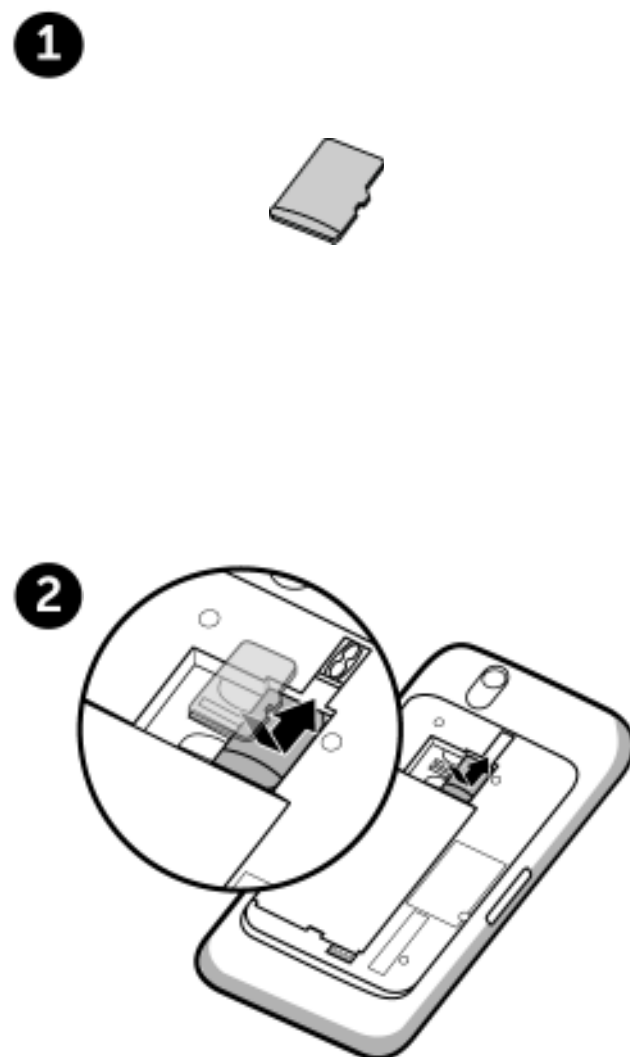


Replace the back cover

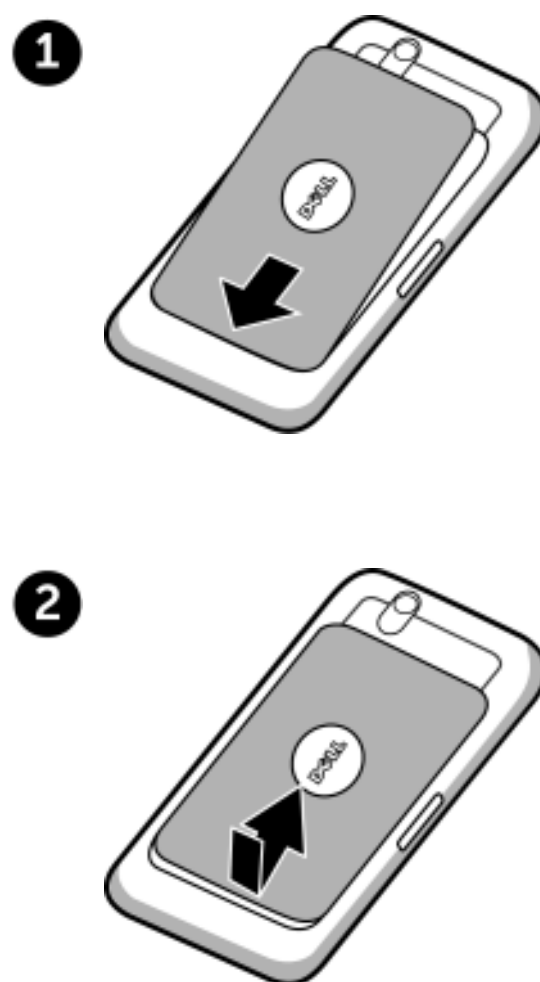


Charge the battery

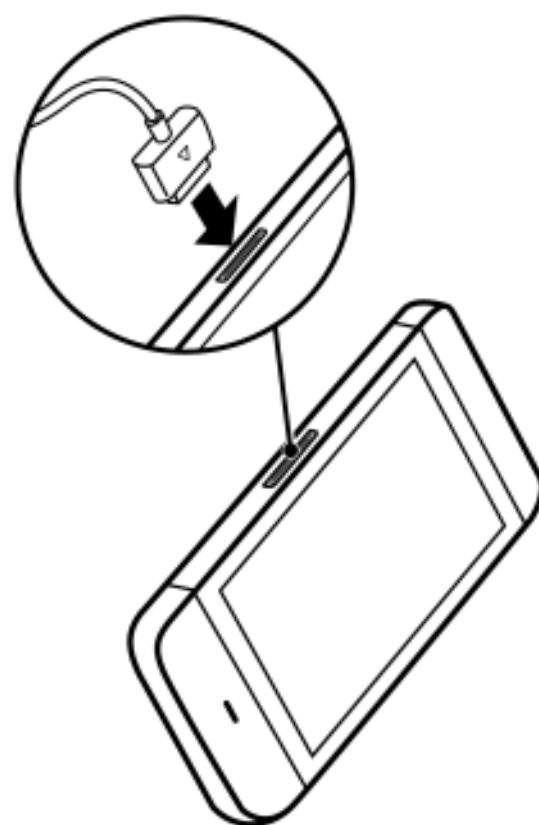

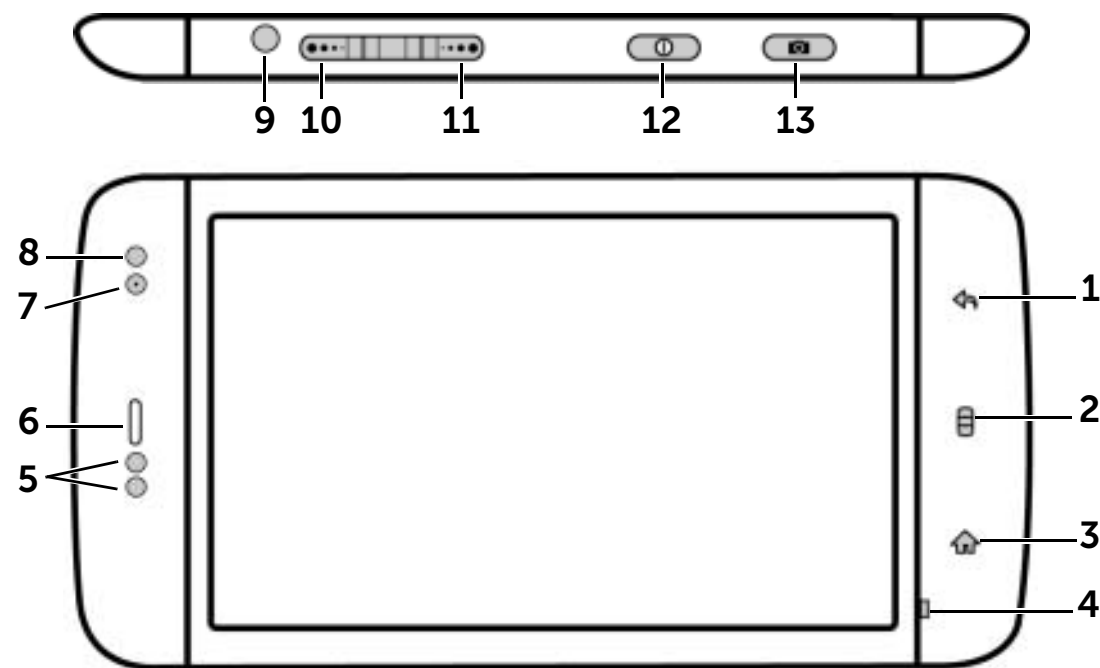

1. Back button
2. Menu button
3. Home button
4. Microphone
5. Proximity sensors
6. Earpiece
7. Front-facing camera lens
8. Ambient light sensor
9. Headphone connector
10. Volume down button
11. Volume up button
12. Power and Sleep/Wake button
13. Camera button

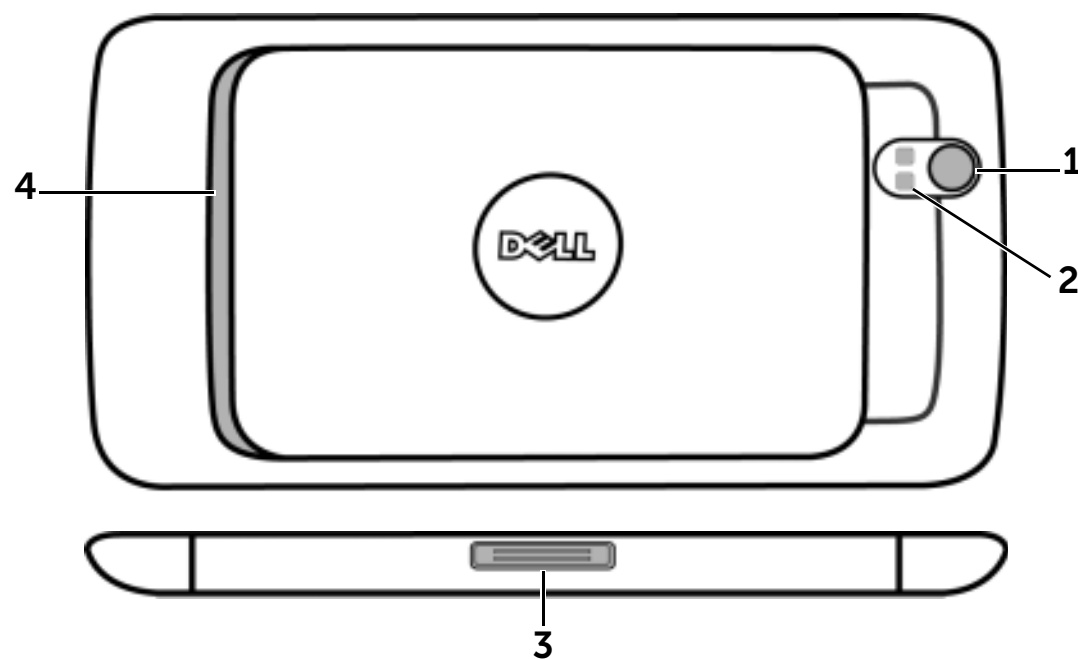


1. Camera lens
2. Camera flash
3. 30-pin connector
4. Speaker

Turn On Your Device

Press and hold the power button



NOTE: The device will turn off automatically if you remove the back cover while the device is on.

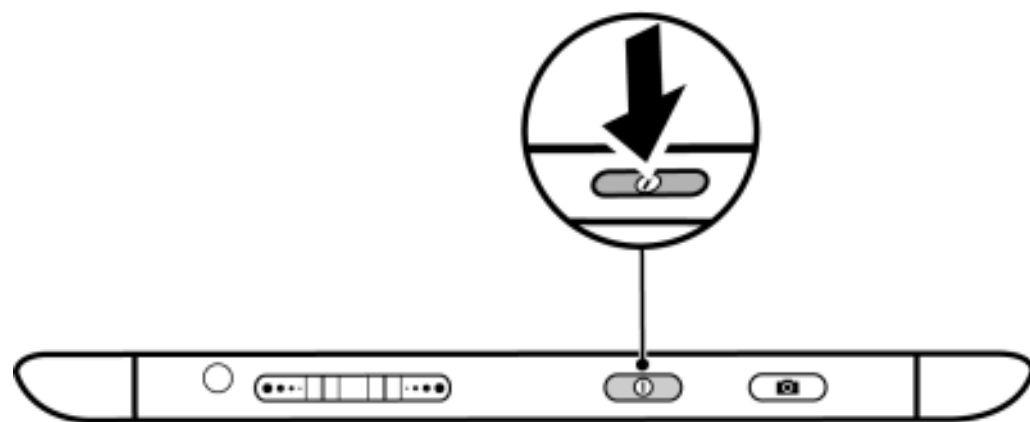

Turn on Wi-Fi and connect to a network

1 Touch the Home button → Menu button → **Settings**→ **Wireless & networks**→ **Wi-Fi** to select the Wi-Fi check box. The device scans for available wireless networks.

2 Touch **Wi-Fi settings**. The names and security settings of discovered Wi-Fi networks will be displayed in the **Wi-Fi networks** list.


3 Flick the **Wi-Fi networks** list and touch the name of the network that you would like to connect to.

4 Enter a password (if necessary), then touch **Connect** to connect to the Wi-Fi network.




NOTE: When your device is connected to a wireless network, the Wi-Fi icon appears in the status bar to indicate the signal strength.

Connect the 3.5 mm headphones to the headphone connector

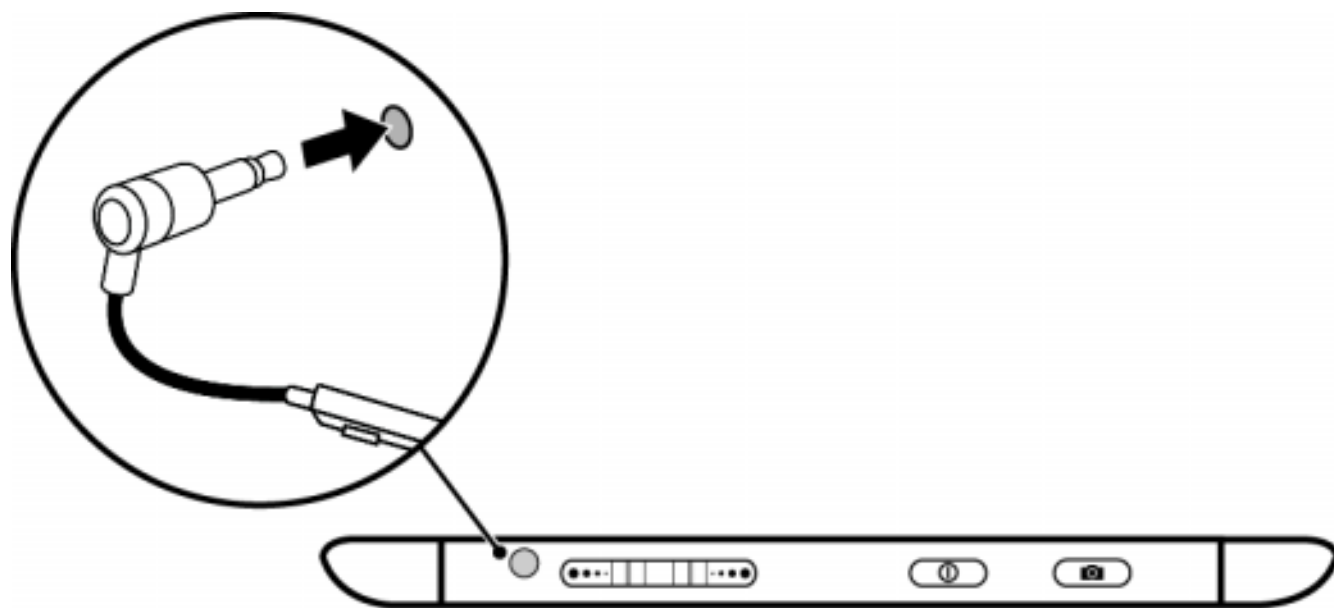

Copying music, photo, and video files to the microSD card in your device

1. Connect the 30-pin-to-USB cable to your device and a computer. Wait for your computer to automatically install the driver.
2. Once the installation is complete, a new “Removable Disk” will become available on your computer. This will allow you to view the contents of the microSD card from your computer.
3. Select the music, photo, and/or video files from your computer, then copy them to the Music, Pictures, and Video folders (respectively) on the Removable Disk.
4. Once the copy is complete, disconnect the 30-pin-to-USB cable.

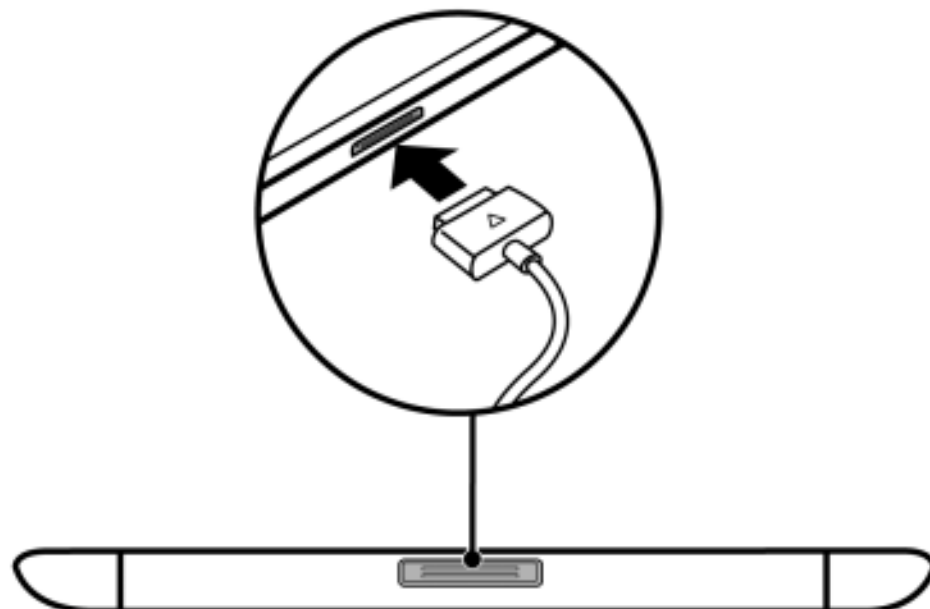

Copying contacts from SIM

1 Touch the Home button → the Launcher button → **Contacts** , or touch the Phone button → **Contacts** .

2 Touch the Menu button → **Import/Export**→ **Import from SIM card**.

3 Touch the contact to add to your device, or touch the Menu button → **Import all** to copy all the contacts to your device.

Adding contacts from Gmail

1 Touch the Home button → Menu button → **Settings**→ **Accounts & sync** to open the **Accounts & sync settings** menu.

2 Touch **Add account**→ **Google**, and sign in to your Google account.

3 Touch the Back button to return to the **Accounts & sync settings** menu, and touch **Auto-sync**.

4 Touch your Gmail account, and touch **Sync Contacts**.

5 Touch the Home button → the Launcher button → **Contacts** , or touch the Phone button → **Contacts** .

6 Touch the Menu button → **Display options**.

7 Touch your Gmail account, scroll down the contact group list, and touch to select **All Other Contacts**. Your Gmail contacts will be added to your Contacts list.

For More Information

For more information, see the User's Manual at **support.dell.com/manuals**. Or, you can view the User's Manual on your device by launching QuickOffice, then selecting **Memory card**.